


# WEIDER<sup>®</sup>CLUB

[www.weiderfitness.com](http://www.weiderfitness.com)

Model No. WEBE1296.0

Serial No. \_\_\_\_\_

Write the serial number in the space above for reference.

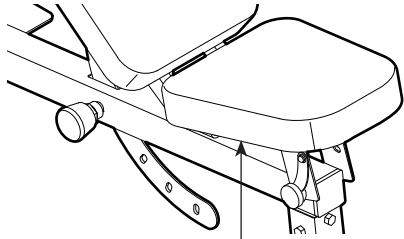

Serial Number Decal (under seat)

## USER'S MANUAL

### QUESTIONS?

If you have questions, or if parts are damaged or missing, **DO NOT CONTACT THE STORE**; please contact Customer Care.

**IMPORTANT:** Please register this product (see the limited warranty on the back cover of this manual) before contacting Customer Care.

CALL TOLL-FREE:


**1-877-992-5999**

Mon.–Fri. 6 a.m.–6 p.m. MT

Sat. 8 a.m.–4 p.m. MT

ON THE WEB:

[www.weiderservice.com](http://www.weiderservice.com)

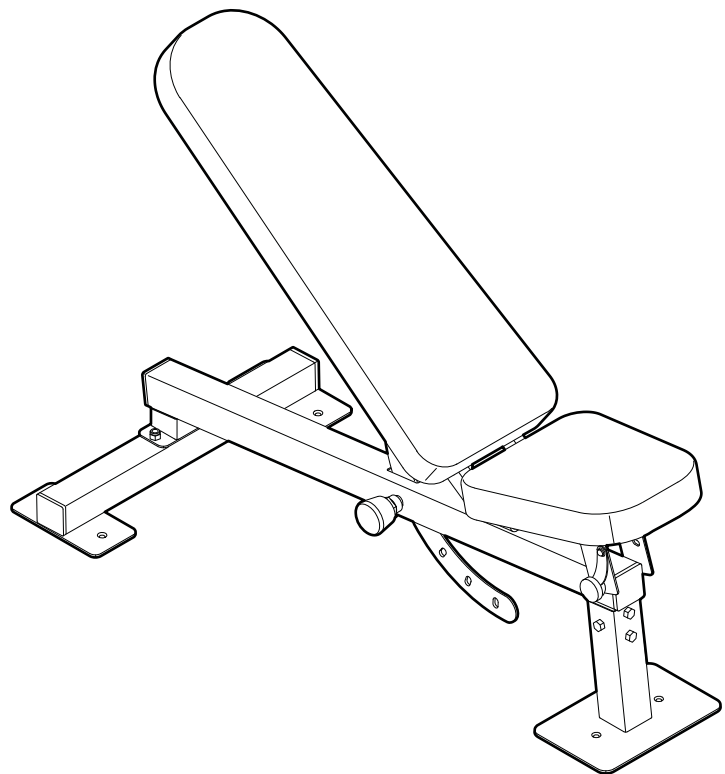

### ⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.




# TABLE OF CONTENTS

WARNING DECAL PLACEMENT .....	2
IMPORTANT PRECAUTIONS .....	3
BEFORE YOU BEGIN .....	4
PART IDENTIFICATION CHART .....	5
ASSEMBLY .....	6
ADJUSTMENT .....	9
EXERCISE GUIDELINES .....	10
PART LIST/EXPLODED DRAWING .....	11
ORDERING REPLACEMENT PARTS .....	Back Cover
LIMITED WARRANTY .....	Back Cover

## WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). **If a decal is missing or illegible, see the front cover of this manual and request a free replacement decal. Apply the decal in the location shown.** Note: The decal(s) may not be shown at actual size.

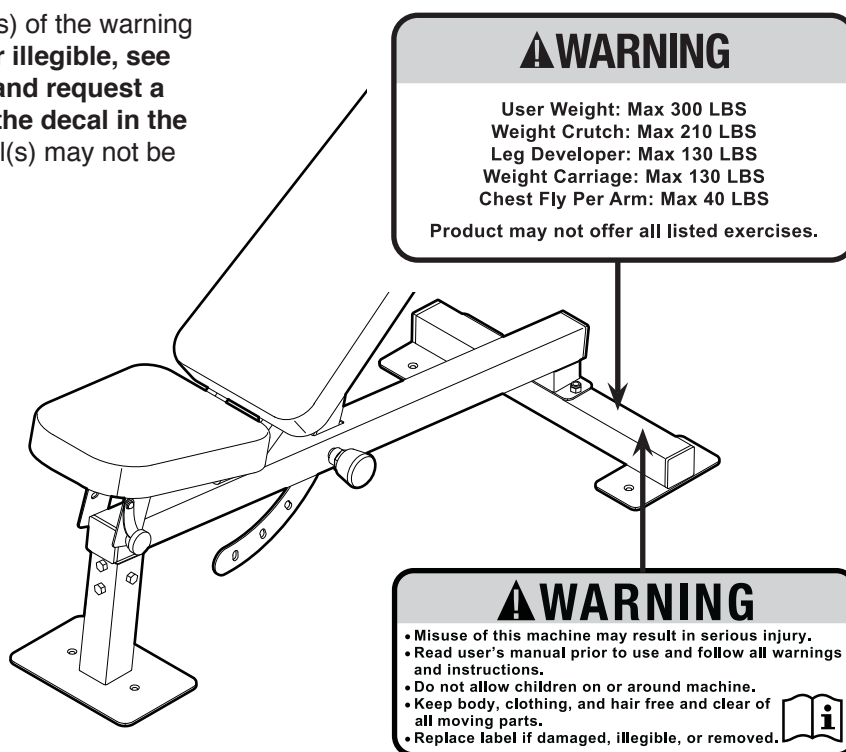

# IMPORTANT PRECAUTIONS

**⚠️ WARNING:** To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your weight bench before using your weight bench. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
2. Read all instructions in this manual and all warnings on the weight bench before using the weight bench.
3. Use the weight bench only as described in this manual.
4. It is the responsibility of the owner to ensure that all users of the weight bench are adequately informed of all precautions.
5. The weight bench is intended for home use only. Do not use the weight bench in any commercial, rental, or institutional setting.
6. Keep the weight bench indoors, away from moisture and dust. Do not put the weight bench in a garage or covered patio, or near water.
7. Place the weight bench on a level surface, with a mat beneath it to protect the floor or carpet. Make sure that there is enough clearance around the weight bench to mount, dismount, and use the weight bench.
8. Keep children under age 12 and pets away from the weight bench at all times.
9. Inspect and properly tighten all parts regularly. Replace any worn parts immediately.
10. Keep hands and feet away from moving parts.
11. Always wear athletic shoes for foot protection while using the weight bench.
12. The weight bench is designed to support a maximum user weight of 300 lbs. (136 kg) and a maximum total weight of 510 lbs. (231 kg). Do not use the weight bench with more than 210 lbs. (95 kg) of weight.
13. Over exercising may result in serious injury or death. If you feel faint or if you experience pain while exercising, stop immediately and cool down.


# BEFORE YOU BEGIN

Thank you for selecting the versatile WEIDER® CLUB weight bench. The weight bench offers a selection of exercise stations designed to develop the major muscles of the upper body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the weight bench will help you to achieve the specific results you want.

**For your benefit, read this manual carefully before using the weight bench.** If you have questions after


reading this manual, please see the front cover of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

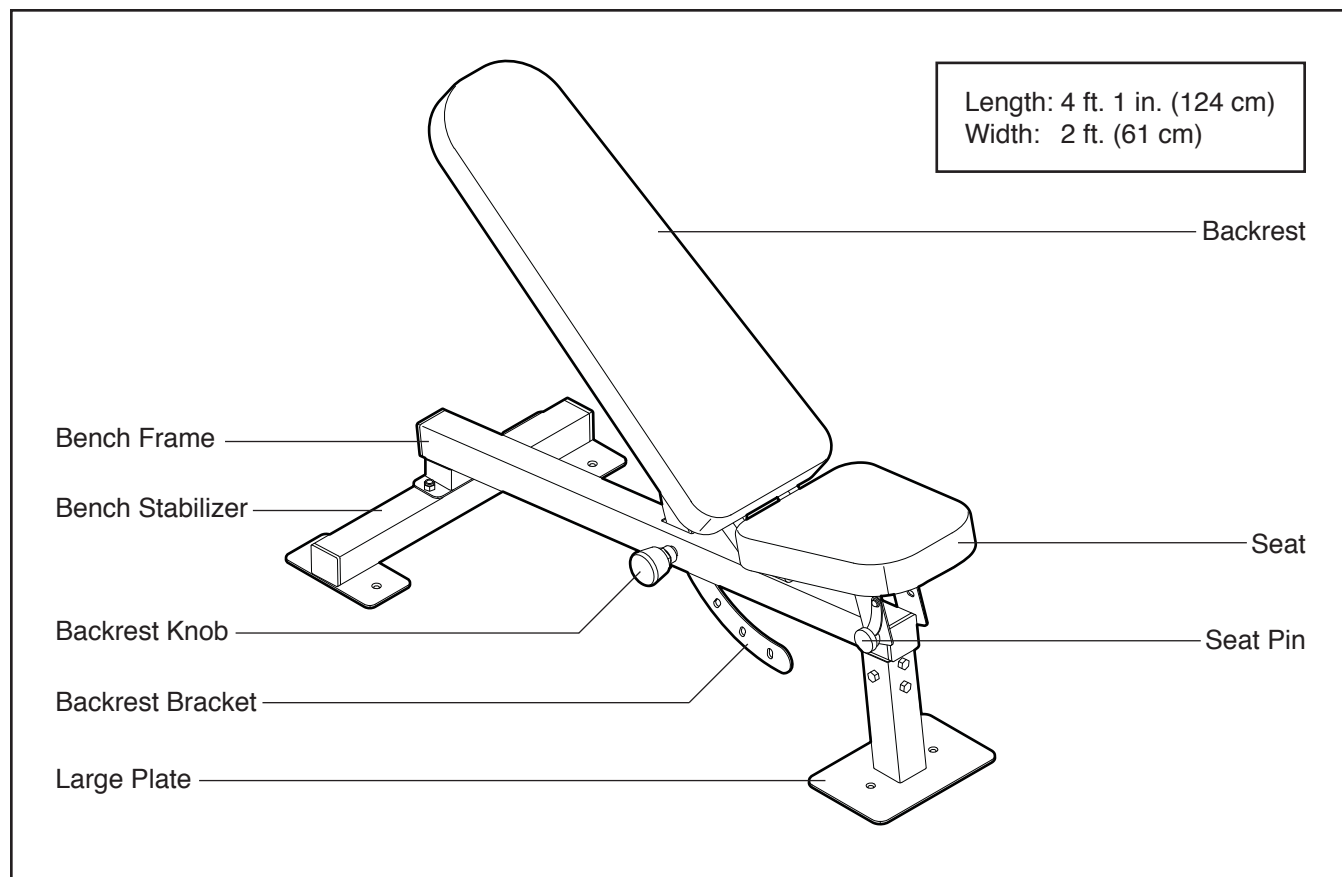

# PART IDENTIFICATION CHART

Use the drawings below to identify the small parts needed for assembly. The number in parentheses below each drawing is the key number of the part, from the PART LIST near the end of this manual. The number following the key number is the quantity needed for assembly. **Note: If a part is not in the hardware kit, check to see if it has been preassembled. Extra parts may be included.**

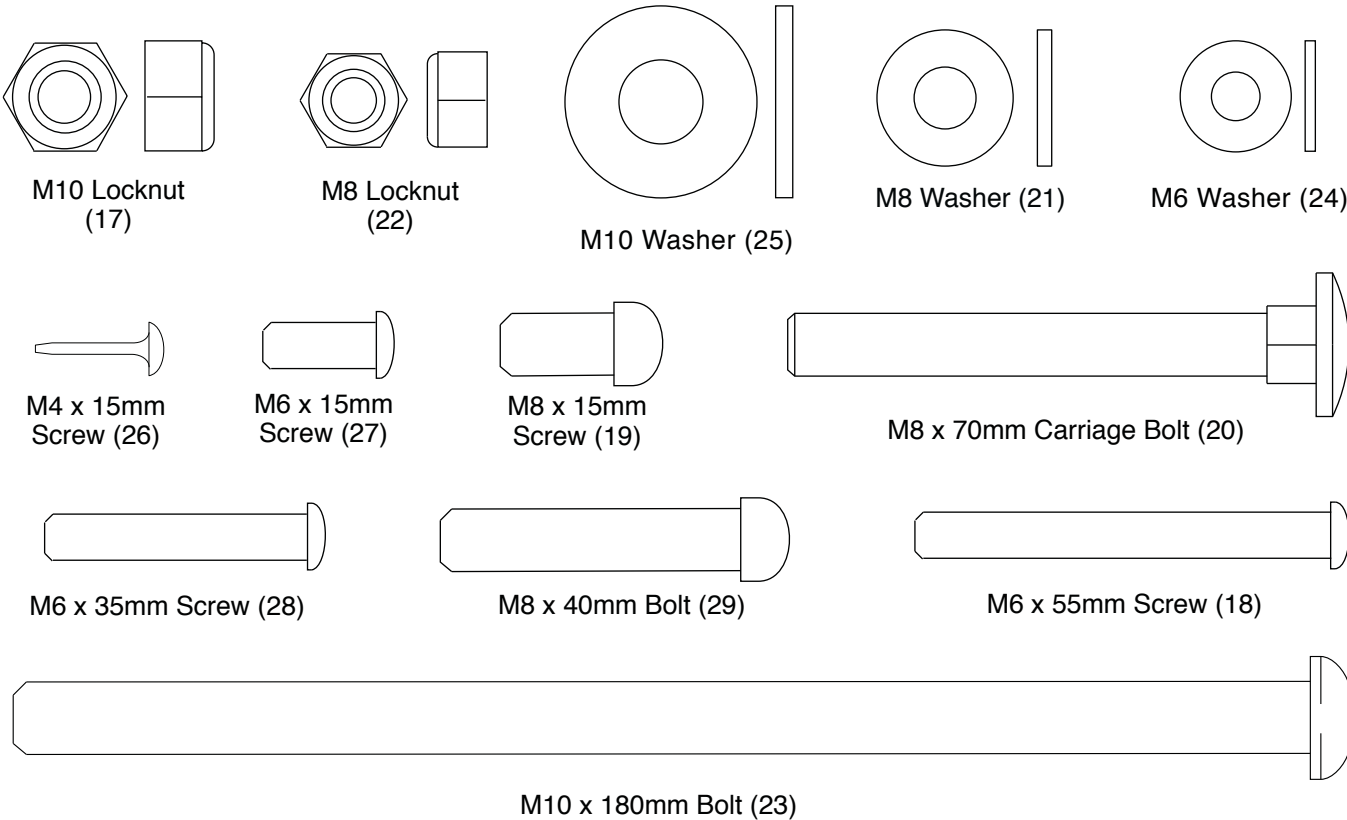

# ASSEMBLY

- To hire an authorized service technician to assemble the weight bench, call 1-800-445-2480.
- Assembly requires two persons.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until you complete all assembly steps.
- To identify small parts, see page 5.

- In addition to the included tool(s), assembly requires the following tools:

one Phillips screwdriver 

one standard screwdriver 


one adjustable wrench 

one rubber mallet 


Assembly may be easier if you have a set of wrenches. To avoid damaging parts, do not use power tools.

1. Attach a Small Plate (5) to the Bench Stabilizer (2) with two M4 x 15mm Screws (26). **Attach the other Small Plate (5) to the Bench Stabilizer in the same way.**

Insert two M8 x 70mm Carriage Bolts (20) upward through the Bench Stabilizer (2).

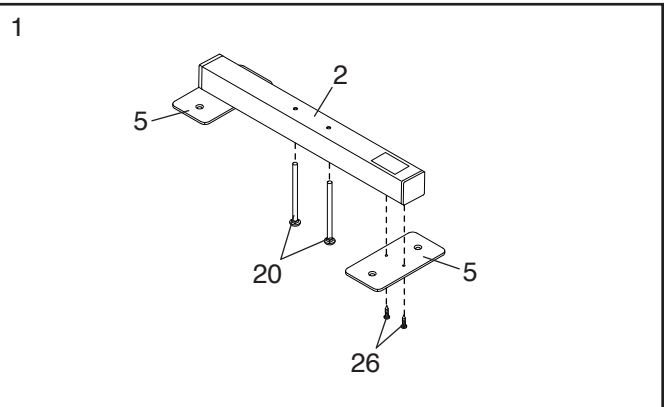


2. Attach the Bench Frame (1) to the Bench Stabilizer (2) with the M8 x 70mm Carriage Bolts (20) and two M8 Locknuts (22). **Do not tighten the Locknuts yet.**

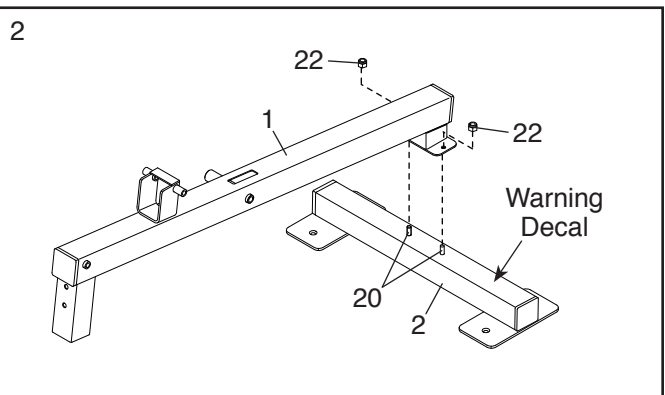


3. Attach the Front Leg (3) to the Bench Frame (1) with four M8 x 15mm Screws (19).


**See step 2. Tighten the M8 Locknuts (22).**

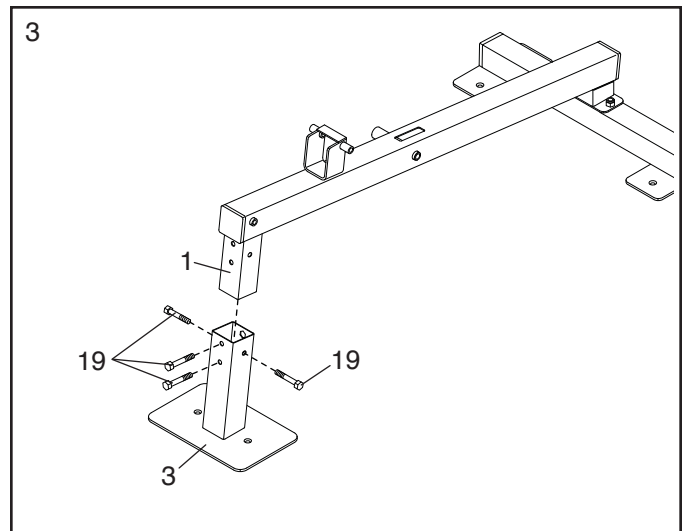


4. Attach the Backrest Bracket (6) to the two Backrest Frames (7) with four M8 x 40mm Bolts (29), four M8 Washers (21), and four M8 Locknuts (22). **Do not tighten the Locknuts yet.**

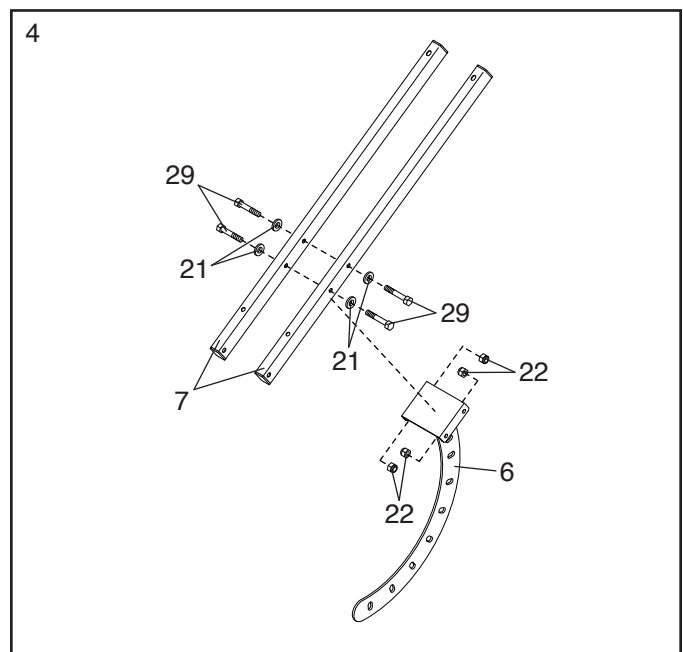

5. Attach the Backrest (9) to the Backrest Frames (7) with four M6 x 55mm Screws (18) and four M6 Washers (24). **Do not tighten the Screws yet.**

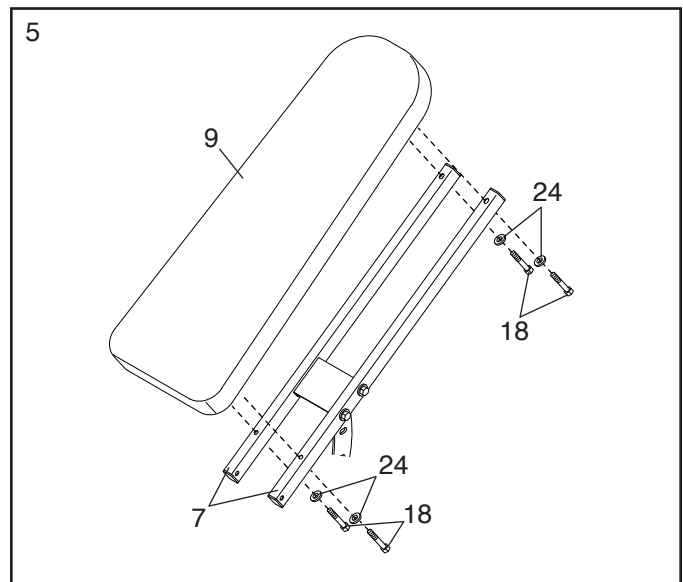

6. Attach the Seat (10) and the Seat Carriage (11) to the Seat Frame (8) with two M6 x 15mm Screws (27), two M6 x 35mm Screws (28), and two M6 Washers (24).

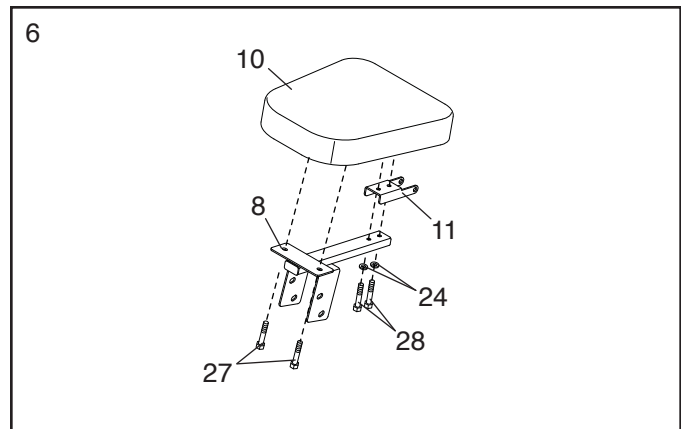


7. Insert the Backrest Bracket (6) into the Bench Frame (1).

Apply a portion of the included grease to an M10 x 180mm Bolt (23).

Attach the Backrest Frames (7) and the Seat Carriage (11) to the Bench Frame with the M10 x 180mm Bolt, two M10 Washers (25), and an M10 Locknut (17). **Do not overtighten the Locknut; the Backrest Frames and the Seat Carriage must pivot freely.**

**See step 4. Tighten the M8 Locknuts (22).**


**See step 5. Tighten the M6 x 55mm Screws (18).**

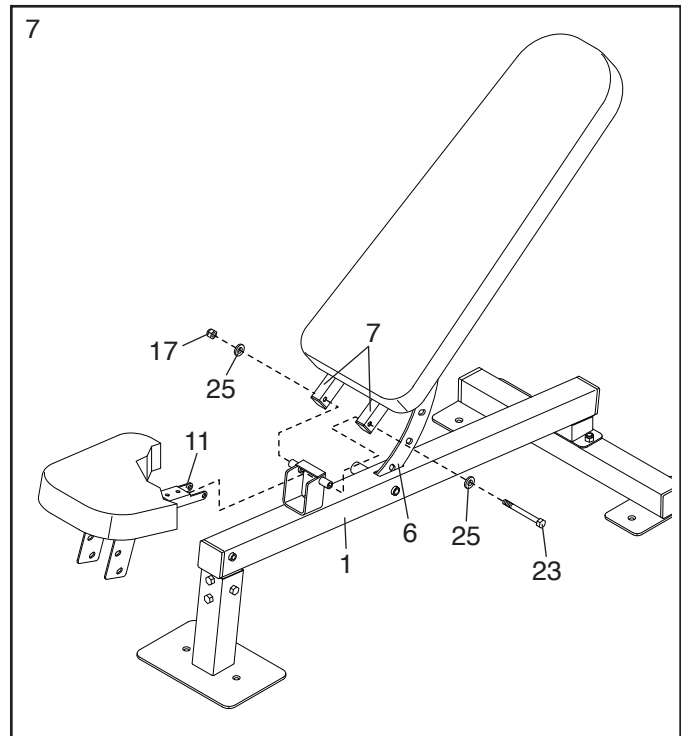



8. Tighten the Backrest Knob (15) into the Bench Frame (1). **Make sure that the Backrest Knob engages a hole in the Backrest Bracket (6).**

Next, insert the Seat Pin (16) through the Seat Frame (8) and the Bench Frame (1).

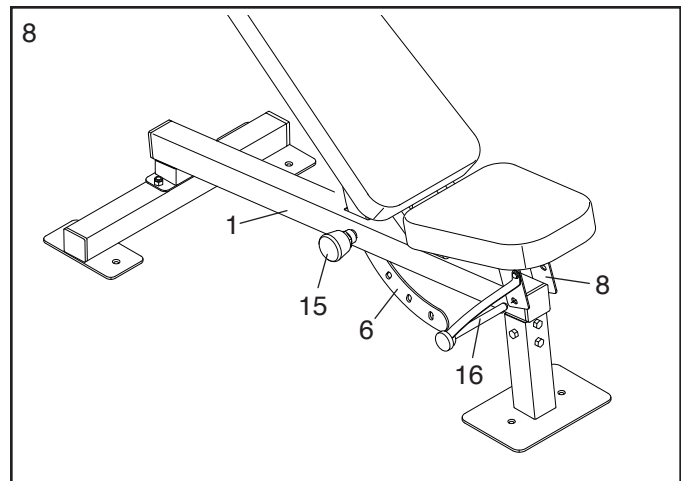

9. **Make sure that all parts are properly tightened before you use the weight bench. The use of all remaining parts will be explained in ADJUSTMENT below.**


## ADJUSTMENT

This section explains how to adjust the weight bench. See the accompanying exercise guide to see the correct form for a variety of exercises that can be performed using the weight bench. Make sure that all parts are properly tightened each time the weight bench is used. Replace any worn parts immediately. The weight bench can be cleaned with a damp cloth and a mild, non-abrasive detergent; **do not use solvents to clean the weight bench.**

### ADJUSTING THE BACKREST AND THE SEAT

To adjust the angle of the Backrest (9), pull the Backrest Knob (15), raise or lower the Backrest, and then release the Backrest Knob. **Make sure that the Backrest Knob engages a hole in the Backrest Bracket (6).**

To adjust the angle of the Seat (10), pull the Seat Pin (16) out of the Seat Frame (8), move the Seat upward or downward, and then reinsert the Seat Pin into the Seat Frame.

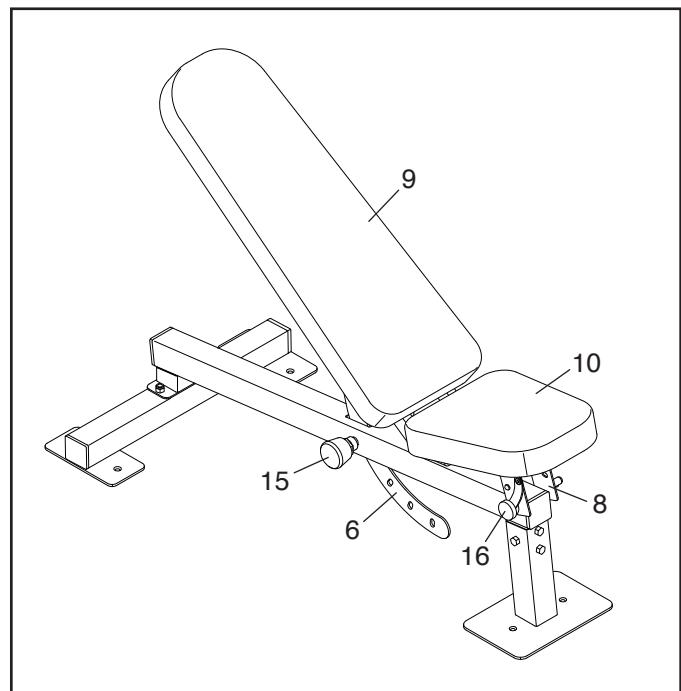

---

# EXERCISE GUIDELINES

## FOUR TYPES OF STRENGTH WORKOUTS

Note: A “repetition” is one complete cycle of an exercise, such as one sit-up. A “set” is a series of repetitions.

**Muscle Building**—Work your muscles near their maximum capacity and progressively increase the intensity of your exercise. Adjust the intensity level of an individual exercise as follows:

- Change the amount of resistance used.
- Change the number of repetitions or sets performed.

Use your own judgment to determine the amount of resistance that is right for you. Begin with 3 sets of 8 repetitions for each exercise you perform. Rest for 3 minutes after each set. When you can complete 3 sets of 12 repetitions without difficulty, increase the amount of resistance.

**Toning**—Tone your muscles by working them to a moderate percentage of their capacity. Select a moderate amount of resistance and increase the number of repetitions in each set. Complete as many sets of 15 to 20 repetitions as possible without discomfort. Rest for 1 minute after each set. Work your muscles by completing more sets rather than by using high amounts of resistance.

**Weight Loss**—To lose weight, use a low amount of resistance and increase the number of repetitions in each set. Exercise for 20 to 30 minutes, resting for a maximum of 30 seconds between sets.

**Cross Training**—Combine strength training and aerobic exercise by following this type of program:

- Strength training workouts on Monday, Wednesday, and Friday.
- 20 to 30 minutes of aerobic exercise on Tuesday and Thursday.
- One full day of rest each week to give your body time to regenerate.

## WORKOUT GUIDELINES

Familiarize yourself with the equipment and learn the proper form for each exercise. Use your own judgment to determine the appropriate length of time for each

workout, and the numbers of repetitions and sets to complete. Progress at your own pace and be sensitive to your body’s signals. Follow each workout with at least one day of rest.

**Warming Up**—Start with 5 to 10 minutes of stretching and light exercise. A warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

**Working Out**—Include 6 to 10 different exercises in each workout. Select exercises for every major muscle group, emphasizing areas that you want to develop. To give balance and variety to your workouts, vary the exercises from workout to workout.

**Cooling Down**—Finish with 5 to 10 minutes of stretching. Stretching increases the flexibility of your muscles and helps to prevent post-exercise problems.

## EXERCISE FORM

Move through the full range of motion for each exercise and move only the appropriate parts of the body. Perform the repetitions in each set smoothly and without pausing. The exertion stage of each repetition should last about half as long as the return stage. Exhale during the exertion stage of each repetition and inhale during the return stroke. Never hold your breath.

Rest for a short period of time after each set:

- Muscle Building—Rest for three minutes after each set.
- Toning—Rest for one minute after each set.
- Weight Loss—Rest for 30 seconds after each set.

## STAYING MOTIVATED


For motivation, keep a record of each workout. Write the date, the exercises performed, the resistance used, and the numbers of sets and repetitions completed. Record your weight and key body measurements once a month. To achieve good results, make exercise a regular and enjoyable part of your life.

# PART LIST/EXPLODED DRAWING

Model No. WEBE1296.0 R1111B

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Bench Frame	18	4	M6 x 55mm Screw
2	1	Bench Stabilizer	19	4	M8 x 15mm Screw
3	1	Front Leg	20	2	M8 x 70mm Carriage Bolt
4	—	(not used)	21	4	M8 Washer
5	2	Small Plate	22	6	M8 Locknut
6	1	Backrest Bracket	23	1	M10 x 180mm Bolt
7	2	Backrest Frame	24	6	M6 Washer
8	1	Seat Frame	25	2	M10 Washer
9	1	Backrest	26	5	M4 x 15mm Screw
10	1	Seat	27	2	M6 x 15mm Screw
11	1	Seat Carriage	28	2	M6 x 35mm Screw
12	4	60mm Square Cap	29	4	M8 x 40mm Bolt
13	1	40mm x 20mm Cap	*	—	User's Manual
14	4	40mm x 25mm Cap	*	—	Assembly Tool
15	1	Backrest Knob	*	—	Grease Packet
16	1	Seat Pin	*	—	Exercise Guide
17	1	M10 Locknut			

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. \*These parts are not illustrated.

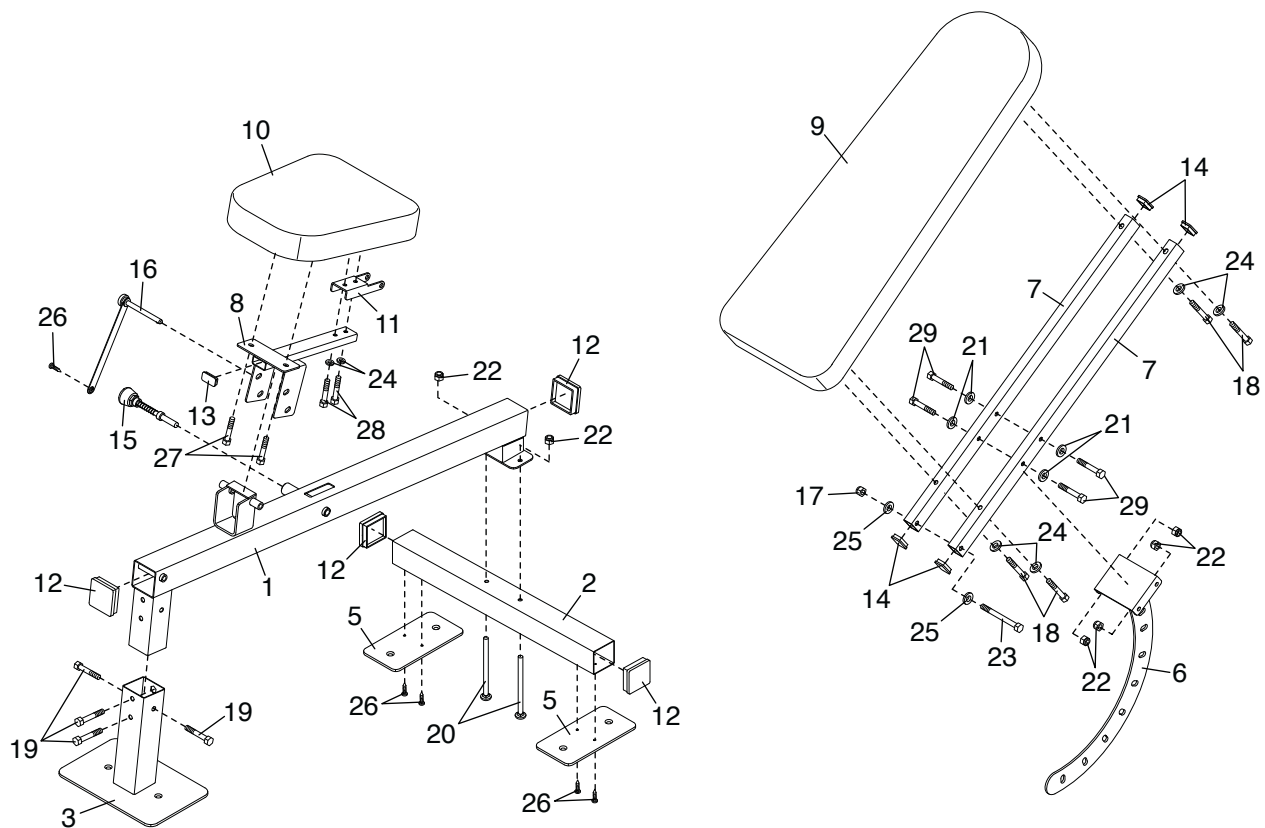

# ORDERING REPLACEMENT PARTS

To order replacement parts, please see the front cover of this manual. To help us assist you, be prepared to provide the following information when contacting us:

- the model number and serial number of the product (see the front cover of this manual)
- the name of the product (see the front cover of this manual)
- the key number and description of the replacement part(s) (see the PART LIST and the EXPLODED DRAWING near the end of this manual)

## LIMITED WARRANTY

**IMPORTANT: You must register this product within 30 days of the purchase date to avoid added fees for service needed under warranty. Go to [www.weiderservice.com/registration](http://www.weiderservice.com/registration).**

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions. Parts and labor are warranted ninety (90) days from the date of purchase.

This warranty extends only to the original purchaser (customer). ICON's obligation under this warranty is limited to repairing or replacing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be preauthorized by ICON. If the product is shipped to a service center, freight charges to and from the service center will be the customer's responsibility. If replacement parts are shipped while the product is under warranty, the customer will be responsible for a minimal handling charge. For in-home service, the customer will be responsible for a minimal trip charge. This warranty does not extend to freight damage to the product. This warranty will automatically be voided if the product is used as a store display model, if the product is purchased or transported outside the USA, if all instructions in this manual are not followed, if the product is abused or improperly or abnormally used, or if the product is used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or costs of removal or installation; or other consequential damages of any kind. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to the customer.

The warranty extended hereunder is in lieu of any and all other warranties, and any implied warranties of merchantability or fitness for a particular purpose are limited in their scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to the customer.

This warranty provides specific legal rights; the customer may have other rights that vary from state to state.

**ICON Health & Fitness, Inc., 1500 S. 1000 W., Logan, UT 84321-9813**